
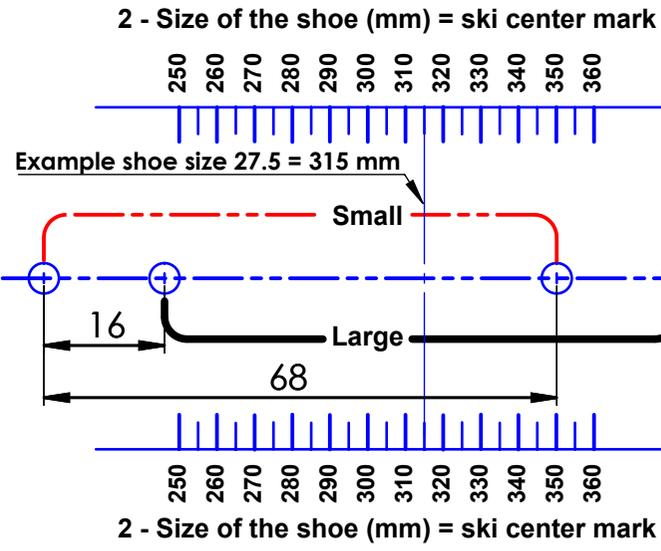


# Drilling Pattern for MEIDJO 3.0 & 2.1 Binding.

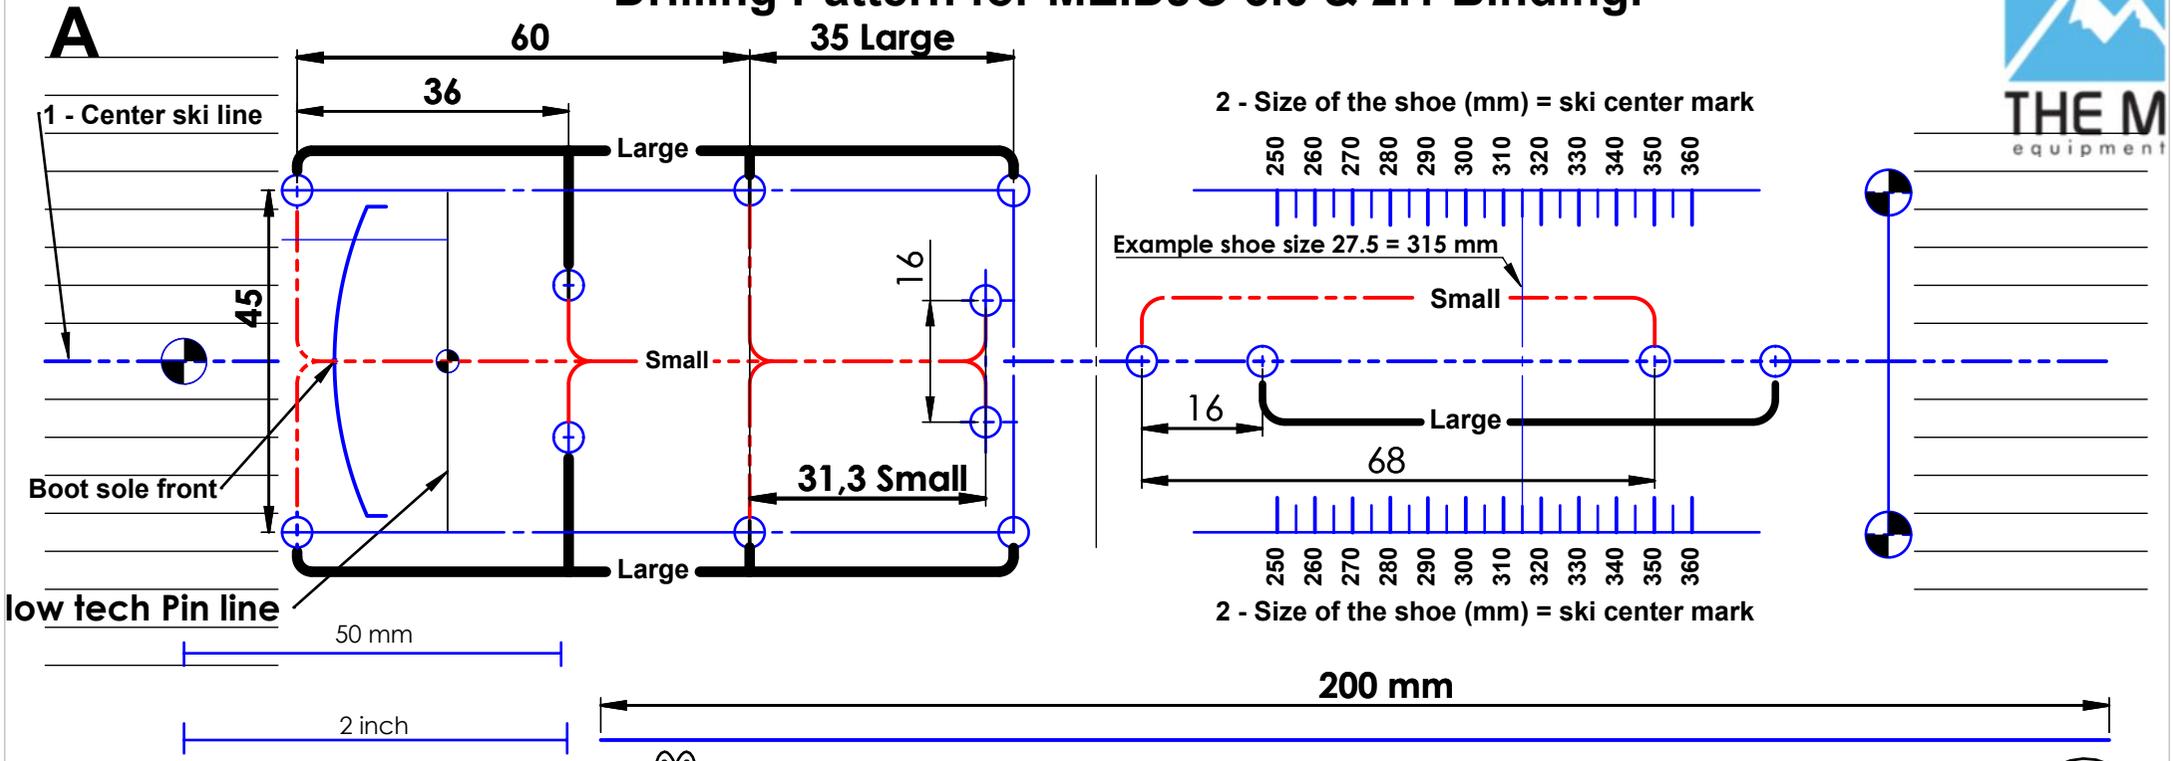

## MEIDJO Binding Instruction

If you print the drilling pattern - print it with no scale and check if the 200 mm line is correct.

Cut the drilling pattern along the line \_\_\_\_\_  
 You have now 2 drilling patterns A and B.  
 Check the size of your boot and the ski mark center.

1. Place the pattern A one the center ski line of your ski
2. Align the scale '2' onto the ski center mark
3. Place the pattern B and align the scale 3 onto Ski center mark
4. Check with your boot (Boot sole front and back & shoe center)
5. Drill the 13 holes with a  $\varnothing 3,6$  mm and 9 mm length drill.
6. Clean the holes
7. Fix your binding

